



DREAM HOUSE FLOOR PLANS- ADDING DIMENSIONS AND TAGS

- ✓ At this point you should have revised your Dream House Schematic CAD Floor Plans and turned it back in for a FINAL grade.
- ✓ Add door tags to all of your doors on your 1st and 2nd floor plans. Do not assign any letters to them at this point yet. You can copy the correct size tag from the “library” of CAD Blocks given to you. (NOTE Layer)
- ✓ Add window tags to all of your windows on your 1st and 2nd floor plans. Do not assign any letters to them at this point yet. You can copy the correct size tag from the “library” of CAD Blocks given to you. (NOTE Layer)
- ✓ Add dimensions to the exterior of your first and second floor plans. (1-4MED dim size, DIMENSION Layer) An example of a side has been shown below.
 - a. Hold the closest exterior dimension strings 2'-0" away from the house. This dimension string will dimension from the corners of walls to center of doors and windows.
 - b. Hold every other exterior dimension string after that 1'-6" space apart.
 - c. Decks and porches are dimensioned on the items themselves.
- ✓ Add dimensions to the interior of your first and second floor plans. Try to hold dimensions to the outer edges of the rooms and align the dimension string from room to room. You may have to relocate ROOM NAMES if they are in the way of the dimensions.

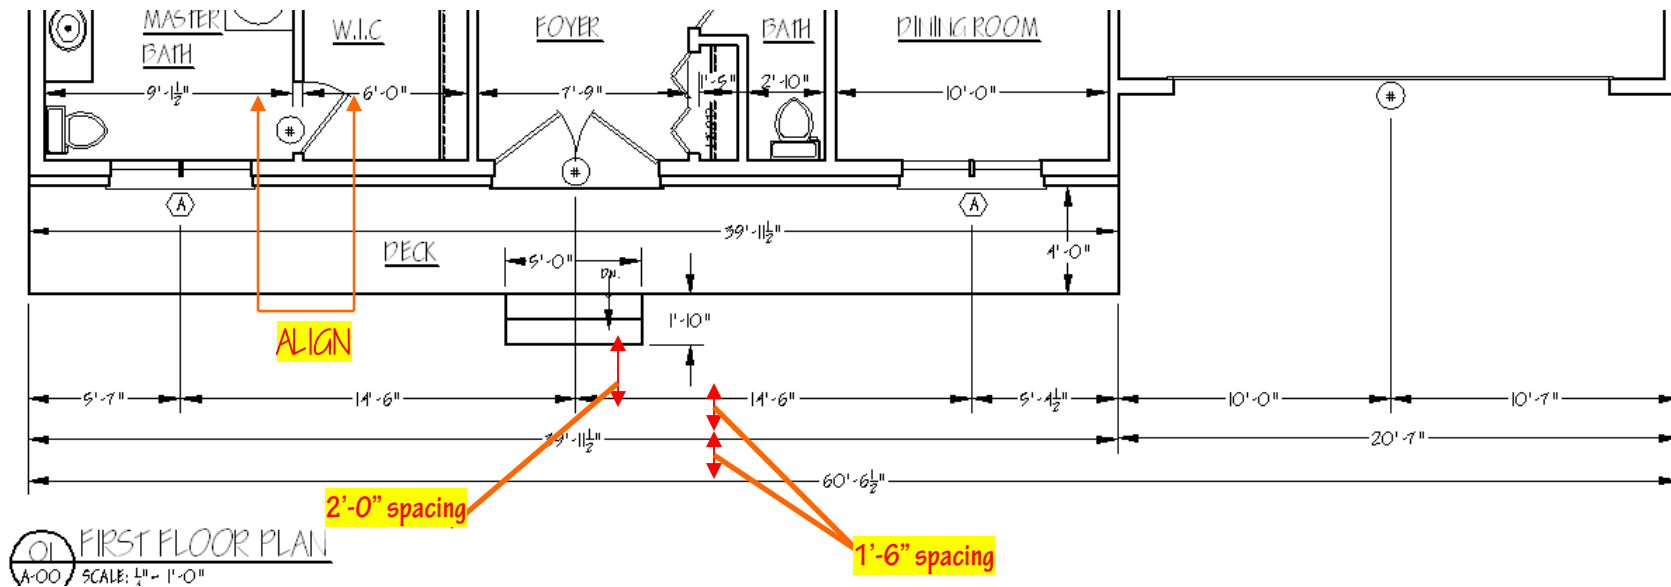

- ✓ When complete, plot each floor plan to an 8.5X11 sheet, “scaled to fit” and turn in.

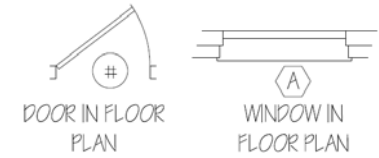