


DREAM HOUSE ELEVATIONS- ADD HATCH & NOTES

- ✓ You have finished your CAD blocked elevations.
- ✓ Add detail such as framing and mullions to your windows as well as window tags to all of your windows. (*Window elements of the WINDOW layer, Tag on the NOTE Layer*)
- ✓ Add detail such as framing and panels to your doors as well as door tags to all of your doors. (*Door elements of the DOOR layer, Tag on the NOTE Layer*)
- ✓ Add any details such as columns, railings, trim, brick patterns to your elevations.
- ✓ Place elevation notes at 1-4MED text on the NOTES Layer. Align your notes as much as possible.
- ✓ Apply hatch to your elevations on the HATCH layer
- ✓ Following are some possible elevation notes that may be on your elevations. You may also have others not listed.

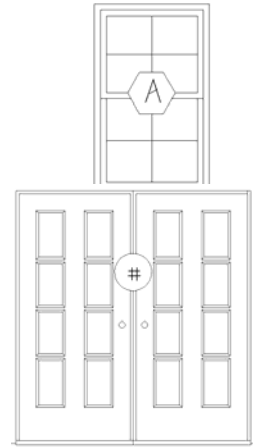

ASPHALT SHINGLES
CEDAR SHAKE SHINGLES
BRICK
BRICK SILL
BRICK SOLDIER COURSE
PILASTERS
COLUMN
RAILING
HIDDEN LINES INDICATE FOUNDATION BELOW
GUTTER
2" DRIP BD. ON 6" RAKE BOXED OUT 6"
4" TRIM
METAL SILL FLASHING
10" APRON BOARD WITH DRIP CAP
(4", 6", 8", 10" OR 12") FRIEZE BOARD
6" HORIZONTAL SIDING
DRIP CAP

EXT. LIGHT
CONCRETE STEPS
CONCRETE SLAB
CONCRETE PORCH SLAB
CONCRETE
ATTIC LOUVER VENT
SHUTTER
STONE
STONE SILL
STONE BASE
ROOF VENT
TRIM BOARD
CHIMNEY
DECORATIVE CHIMNEY CAP
6" FASCIA BOARD WITH GUTTER

- ✓ When complete, plot each elevation to an 8.5X11 sheet, "scaled to fit" and turn in.

Elevations- Hatch and Notes- Check set Grade _____

Elevations- Hatch and Notes- Final Grade _____

Below is an example on how to hatch and note an elevation.
 You can see this example in the Y: named, “**Hatched Elevation Example**”

